

Introduction

Welcome to the Cyber Acoustics CA-2880 speaker system.

This speaker is designed to deliver superior audio performance to laptops, netbooks and home computers.

Read Instructions Carefully – All caution and operating instructions should be read before this device is operated.

Box contents

Speaker
Carry pouch
Cable
Owner's Guide with connection diagram



Caution

- **Heat** – Keep speakers out of extreme heat, and away from sources producing extreme heat, such as, space heaters, radiators, stoves, and other devices emitting heat.
- **Water and Moisture** – Keep speakers out of the rain and humid conditions to avoid electric shock. Keep speakers away from water, such as, sinks, bathtubs, swimming pools, washing machines, tubs of water, etc. In order to avoid electric shock. Keep water from dripping on the device, do not put objects containing water, such as vases on top of the device, and do not put the device near standing water.
- **Cleaning** – Use a dry cloth for cleaning. Do not wipe any part of the system with cleaning solvents, such as, furniture wax, bleach, benzene, or ammonia.


Speaker preparation

This speaker is designed to clamp to the top of a laptop / netbook monitor. When the clamp is closed it also serves as a desktop pedestal.

Operating instructions

Please read the step by step instructions along with the diagrams provided.

- Take the 3.5mm green plug and connect to your laptop, netbook or home computer.
- Take the USB plug and connect to a USB port for power.

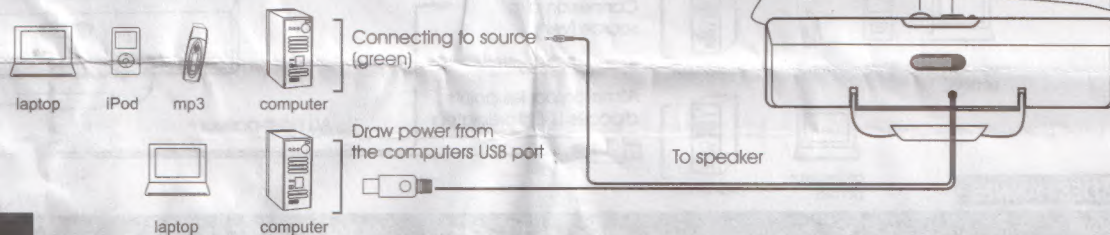

Trouble shooting

Symptom	Solution
Speaker System Will Not Power On.	Power button is not turned on. Press in and check for blue LED indicator light to come on. Make sure the PC is turned on and USB connector is in good connection with PC USB port.
Speaker Does Not Produce Sound.	Verify the speaker is getting power. Check above steps.
	Make sure the volume is turned up to audible listening level.
	Verify that all cables are plugged into the correct jacks.
	Many times users believe the speakers are not working, when in fact they are having trouble with the sound source. The most common problem when connecting to a computer sound card is the connections are incorrect. Make sure you are connected to the audio output jack from your computer sound card. Many times it has a green color to it. Also, make sure your media device or CD/DVD device is playing and the volume settings are turned up and not muted. If you still have problems, disconnect the speaker source cable from your computer and connect to a MP3, CD player, or anything else with a 3.5mm headphone jack. If your speakers work on this other source, you know the speakers are okay and the problem lies with your computer or the connections.
Sound Is Distorted.	Turn the volume down ¼ to ½ levels. If this does not work, also check the computer operating system volume level and decrease it if necessary.
	Adjust the computer's master volume control by balancing the volume until it's centered, then adjust the volume levels on the speakers.

If you have questions or need assistance with your speakers, please call or consult our website for further troubleshooting tips.

Telephone: (USA) 360 823 4100 Website: www.cyberacoustics.com iPod is a trademark of Apple Inc., registered in the U.S. and other countries.

Warranty information Limited warranty

Cyber Acoustics warrants to the purchaser that this product shall be free from defects in materials or workmanship for a period of one year from original purchase date. Proof of purchase is required. Please retain your receipt. The warranty registration card should also be filled out completely and immediately returned to Cyber Acoustics.

During the warranty period, if this product is found to be defective under normal use and service, Cyber Acoustics shall at its option repair or replace it with new or reconditioned product.

This warranty does not cover defects resulting from accidents, abuse, misuse, or unauthorized service. This warranty gives you specific rights. You may have other legal rights which vary from state to state.

To obtain warranty service, return the product with shipping prepaid to Cyber Acoustics. Cyber Acoustics reserves the right to replace any discontinued product with one of equal value.

Note:

1) For technical support and questions, please contact Cyber Acoustics
Tel: 360-823-4100 / Fax: 360-883-4888 / E-mail: tech.support@cyberacoustics.com

GO GREEN – SAVE \$\$\$ register online at www.cyberacoustics.com